

care moves...



technology workstation solutions



care moves.

Altus understands there is power in productivity. We are a leading manufacturer of mobile and wall-mounted technology workstations because we study clinicians' needs and design innovative workstation solutions to enhance efficiency and workflow.

Healthcare environments have a wide range of challenges. Altus technology workstations enable optimized mobility, adjustability, access to patient data, documentation at the point of care, and clinician well-being.



PICTURED ABOVE

H Class Laptop Cart – HLC7P2 (American Natural Maple) Single Rollerblade Casters

H Class Kidney Laptop Cart – MPC-43P (American Natural Maple)

Single Rollerblade Casters



- An exclusive focus on the needs of healthcare clinicians
- Patented, easy-to-operate Ascend® sit-to-stand lift technology
- Maximum mobility
- Fast, easy and extensive customization



PICTURED ABOVE
 Clio LCD Cart – C3 (American Natural Maple)
 Single-Wheel Shrouded Caster

SOLID



Cloud (Standard Color)
0141



Vintage
0203



Shark Grey
6005

WOODGRAIN



Crossfire Java
2066



Summerflame
2013



American Natural Maple
2028

ABSTRACT



Cashmere Fibers
4007



Concrete Fibers
4008

care moves... just roll with it.

We study clinicians' everyday workflow and healthcare environment challenges. Our unique workstation solutions provide clinicians with ease of mobility and effortless adjustments. Accessing technology at anytime and anywhere, working safely within different healthcare environments, and enhancing productivity are just some of the ways our mobile technology workstations are improving clinician efficiency and physical comfort.



PICTURED ABOVE
Clio LCD Cart – C3 (Cloud)
Dual Wheel Casters



4" MOBILE CASTER OPTIONS:

- Single-Wheel Rollerblade casters for optimal maneuverability on non-powered carts only
- Single-wheel Shrouded casters with optimal maneuverability promote a clean aesthetic on powered carts
- Dual-Wheel casters are an ideal option when multiple floors are visited and elevator thresholds are traversed

ENHANCED MOVEMENT FEATURES:

- Small footprint for ease of movement
- Monitor swivels to clear view when moving and to provide quick collaborative work options



SINGLE-WHEEL SHROUDED CASTER



DUAL-WHEEL CASTER




SINGLE-WHEEL ROLLERBLADE CASTER

(Non-Powered Only)

care moves... the ups and downs.

Delivering point of care for caregivers in a simple, yet effortless way. Whether sitting or standing, patient interaction is facilitated through our Ascend® sit-to-stand lift technology. Our mobile workstations are versatile and easy to adjust for maximum comfort while entering patient data, interacting with patients, or reviewing treatment plans.

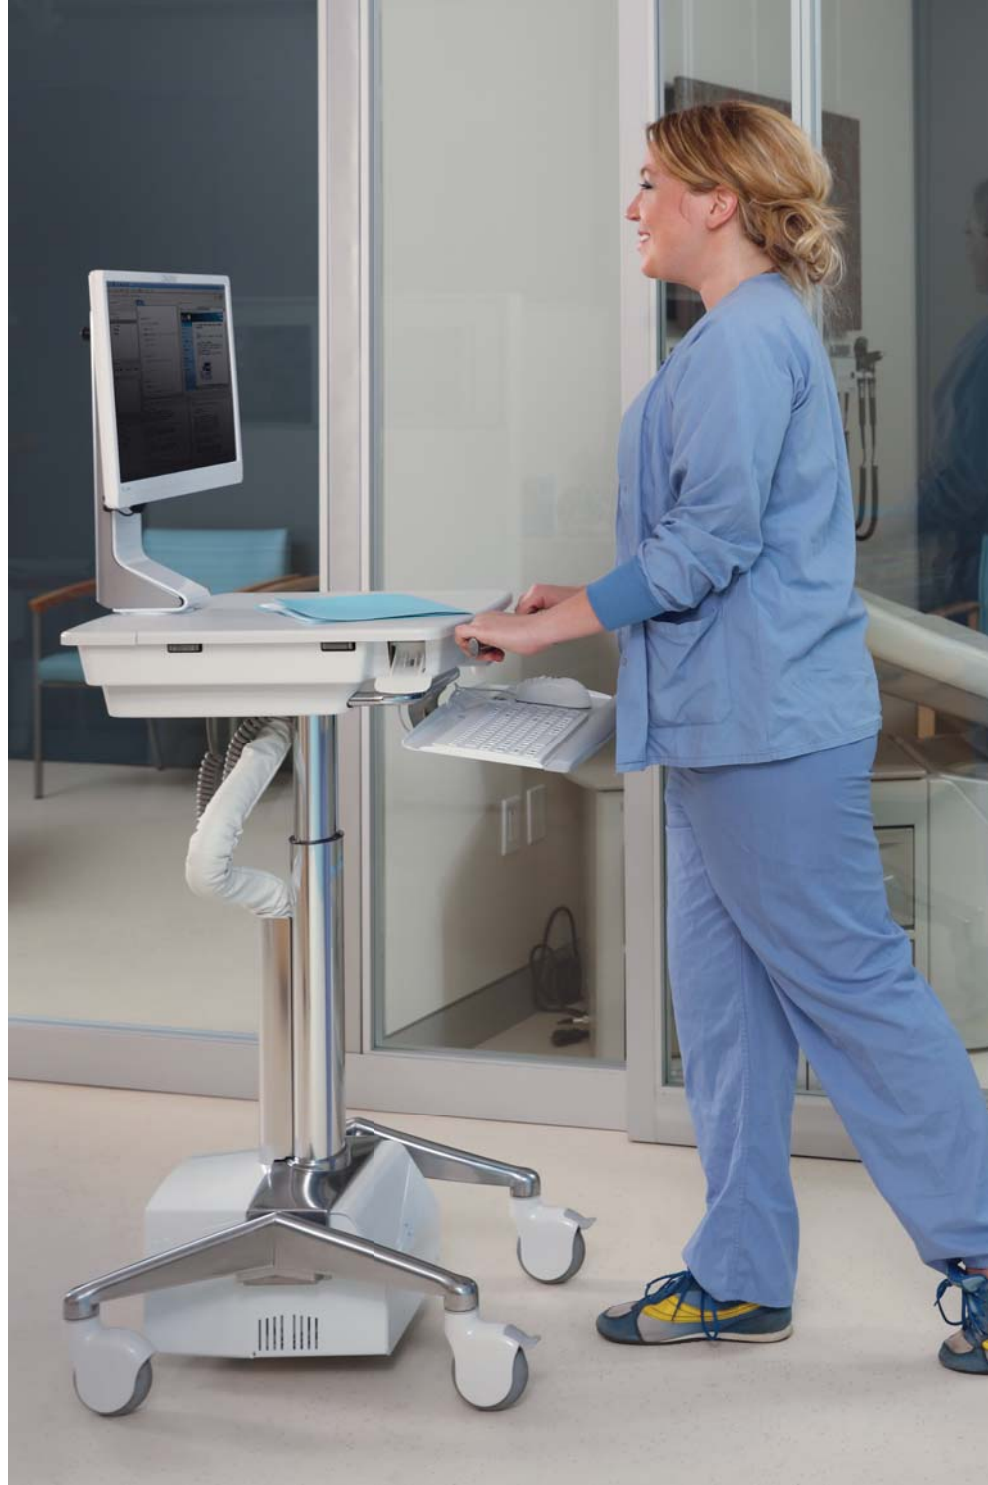

PICTURED ABOVE
Clio LCD Cart – C3 (Cloud)
Single-Wheel Shrouded Casters



PICTURED ABOVE
 H Class Kidney Laptop Cart – MPC-43P (Cloud)
 Single-Wheel Rollerblade Casters

- Ascend® sit-to-stand lift technology offers 18" of height adjustment range with an ergonomically contoured height adjustment lever
- Swivel monitor provides interactive communication
- Keyboard slides out and tilts for comfort
- Keyboard light for dimly lit environments



PICTURED ABOVE
 H Class Laptop Cart – HLC7P2 (Cloud)
 Single-Wheel Rollerblade Casters

care moves... empowering your workflow.

Introducing an intelligent approach to 24/7 power.

Clio powered carts always have the ability to power up technology components. This is achieved through renewable charging (cordless) and/or on-board charging. Altus' AC Powered System platforms; Clio Swap, Clio and Clio Plus keep your mobile workstations workflow uninterrupted.



CLIO SWAP



CLIO



CLIO PLUS



PICTURED ABOVE
 Clio LCD Cart – C3 (Cloud)
 Single-wheel Shrouded Casters

Clio Swap is a swappable-power cart system. Electrical power is renewed by swapping a depleted battery for a fully charged battery. The 3.6 lb. battery makes it easy for caregivers to install or remove with one hand.

Clio is all about unsurpassed runtime in this powered cart. Caregivers will enjoy the freedom to utilize this cart during their shift and recognize that Clio has the most durable, reliable and the safest battery technology available.

Clio Plus is a flexible, hybrid system that can utilize either swappable-power through swapping a depleted battery for a fully charged battery or wall outlet power through on-board charging.



PICTURED ABOVE
 Clio LCD Cart – C3 (Cloud)
 Single-Wheel Shrouded Casters



CLIO SWAP
 BATTERY



CLIO PLUS
 BATTERY

care moves... in healthy caregivers.

To assist in promoting a healthy work environment, it is essential to have a technology workstation that considers human factors and adjusts to each unique clinician. Our products meet or exceed the ability to adjust to fit each caregiver.



PICTURED ABOVE
Clio LCD Cart – C3 (Cloud)
Single-Wheel Shrouded Casters



- 1 18" of Sit-to-Stand Height Adjustment
- 2 Foot Clearance
- 3 Casters
- 4 Pull-out Keyboard Platform with Tilt Feature
 - Wrist Rest
 - Mousing Area
- 5 Monitor Support
 - 5" of Height Adjustment
 - Cable Management
 - -10°/+20° Tilt
 - 180° Swivel
- 6 Handle
 - Battery Fuel Gauge
 - Keyboard Platform LED Light
 - Mute Button
 - On/Off Button
- 7 Barcode Holder
- 8 Height Adjustment Lever (was paddle handle)
- 9 Cord Hook
- 10 Integrated Cable Management




PICTURED ABOVE
 Clio LCD Cart – C3 (Cloud)
 Single-Wheel Shrouded Casters

care moves... off the wall.

Our REACH wall-mounted workstations allow the caregiver to sit or stand beside the patient with the ability to share information easily. The ability to swivel/rotate the workstation not only creates a healthy work environment for the caregiver, but also gives the patient a stress-free visit.



PICTURED ABOVE
REACH Independent LCD Swivel Workstation – RCLS-32-WKS-EX (Cloud)
LT, 32" Track, Track Mounted CPU Holder – RC-CPU-21

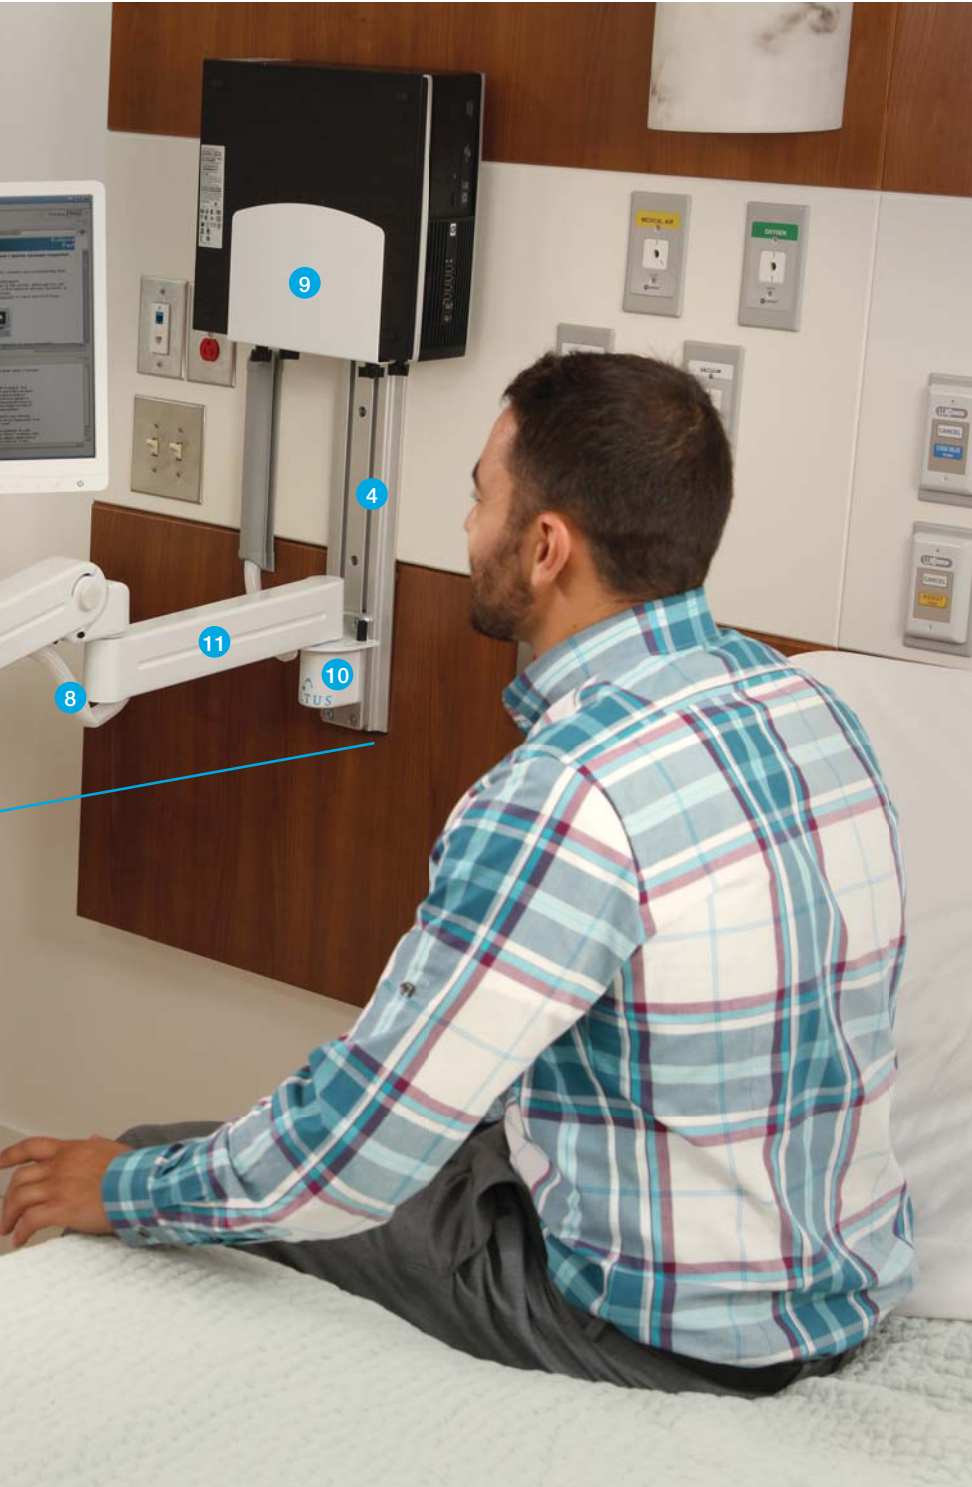

- 1 59" Extension from the Wall Available
- 2 Flip-up Workstation (Stores 10" from the Wall)
- 3 Monitor Support
 - 13" of Height adjustment
 - +60°/-40° Tilt
 - 180° Swivel
- 4 Up to 48" of Height Adjustment
- 5 Slide-out Keyboard Platform with Mousing Area
- 6 Ergonomic Wrist Rest
- 7 Upper Shelf – Worksurface with Spill-proof Lip
- 8 Integrated Cable Management
- 9 Adjustable CPU Holder
- 10 Pivot Limiter
- 11 18" Extension Arm



care moves...



Clio Swap LCD Cart
C7 (Cloud)

Clio Laptop Cart
C1 (Cloud)

Clio LCD Cart
C3 (Cloud)

Clio Plus LCD Cart
C9 (Cloud)



H Class LCD Cart
HHC8P (Cloud)



H Class Laptop Cart
HLC7P2 (Cloud)



H Class Kidney Laptop Cart
MPC-43P (Cloud)



REACH Independent LCD
Swivel Workstation
RCLS-32-WKS-EX (Cloud)



3731 Northridge Drive NW, Suite 1, Walker, MI 49544

PH 888.537.1311

altus-inc.com

